



**WARNING:** separate as much as possible the probe and digital input signal cables from the cables carrying inductive loads and power cables to avoid possible electromagnetic disturbance. Never run power cables (including the electrical panel wiring) and signal cables in the same conduits.

**Dimensions (mm)**





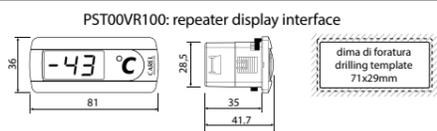



Fig. 1

**Panel mounting**

**powercompact:**  
Panel mounting: by two lateral sliding plastic brackets.

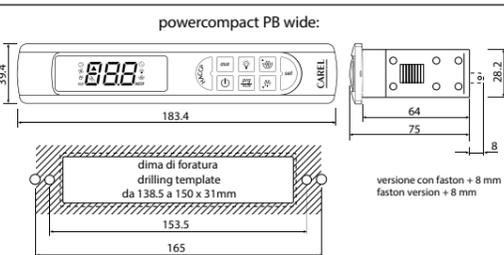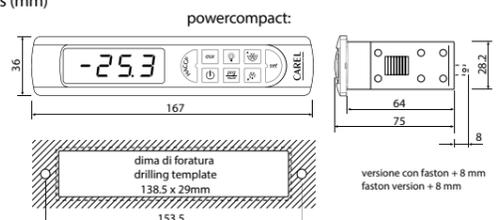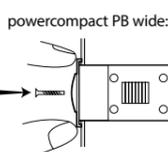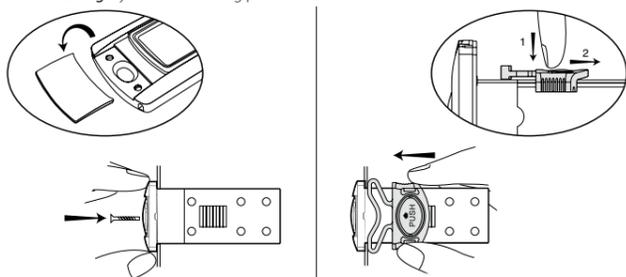

**PST00VR100: repeater display interface**

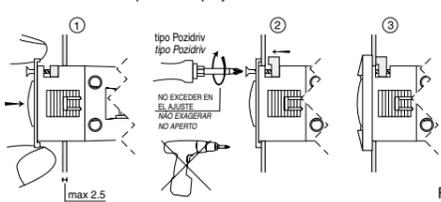

Panel mounting: by two countersunk screws, max. diameter 3.9 mm.

Fig. 2

**Wiring diagrams**

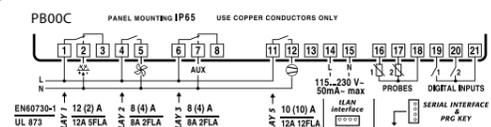


Fig. 3

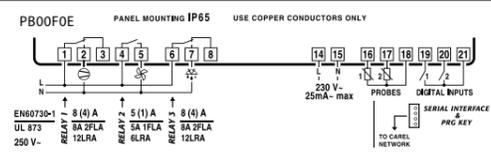


Fig. 4

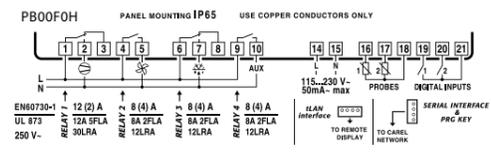


Fig. 5

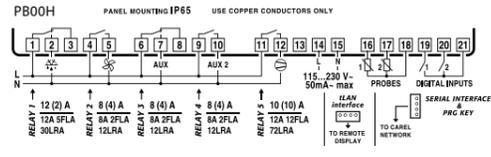


Fig. 6

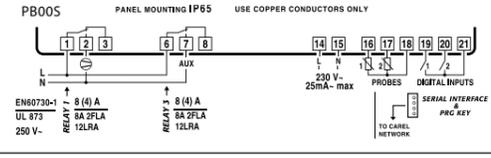


Fig. 7

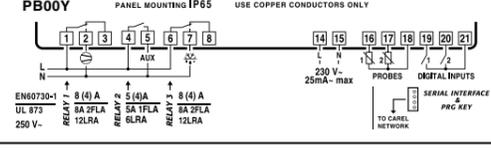


Fig. 8

**Option codes**

| CODE        | DESCRIPTION  |
|-------------|--|
| IIRTRRES000 | small remote control   |
| IROPZ48500  | RS485 serial interface   |
| IROPZ48550  | RS485 serial board interface with automatic recognition of the polarity +/-      |
| IROPZDSPO0  | remote display interface   |
| PSTO0VR100  | remote repeater display  |
| IRO0RG0000  | remote repeater display ir33 range green display                                 |
| IRO0RR0000  | remote repeater display ir33 range red display                                   |
| PSTCON10B0  | repeater display connection cables 1,5 m   |
| PSTCON03B0  | repeater display connection cables 3 m   |
| PSTCON05B0  | repeater display connection cables 5 m   |
| PSOPZKEY00  | parameter programming key with extended memory and 12 V batteries included       |
| PSOPZKEYA0  | parameter programming key with 230 Vac power supply                              |
| IROPZKEY00  | parameter programming key with 12 V battery included                             |
| IROPZKEYA0  | parameter programming key with extended memory and external 230 Vac power supply |
| VPMSTDKY*0  | key programming kit  |

Tab. 1

**Display**

powercompact uses a built-in display terminal with three LED digits and icon, to display the operating status. An additional display can be connected to the powercompact controller, via a suitable interface for example to display the reading of a third probe.

**Signals on the display**

| Icon             | Function  | ON                            | Normal operation                               | Start up  |
|------------------|---|-------------------------------|--|---|
| COMPRESS.        | compressor ON   | compressor ON                 | compressor OFF                                 | compressor request  |
| FAN              | fan ON  | fan ON                        | fan OFF  | fan request   |
| DEFROST          | defrost ON  | defrost ON                    | defrost OFF                                    | defrost request   |
| AUX              | auxiliary output AUX active                                 | auxiliary output AUX active   | auxiliary output AUX not active                | anti-sweat heater function active   |
| ALARM            | delayed external alarm (before the expiry of the time 'A7') | no alarm present              | no alarm present                               | alarms in normal operation (e.g. high/low temperature) or alarm from external digital input, immediate or delayed |
| CLOCK            | if at least 1 timed defrost has been set                    | no timed defrost is           | clock alarm present                            | ON if real-time clock present   |
| LIGHT            | auxiliary output LIGHT active                               | auxiliary output LIGHT active | auxiliary output LIGHT not active              | anti-sweat heater function active   |
| SERVICE          |   | no malfunction                | malfunction (e.g. EEPROM error or probe fault) |   |
| HACCP            | HACCP function enabled                                      | HACCP function not enabled    | HACCP alarm (HA and/or HF)                     |   |
| CONTINUOUS CYCLE | CONTINUOUS CYCLE enabled                                    | CONTINUOUS CYCLE not enabled  | CONTINUOUS CYCLE request                       |   |

Tab. 2

The blinking status indicates a request for activation that cannot be implemented until the end of the corresponding delay times.

**Buttons on the keypad**

| Icon     | Button   | Pressing the button alone other  | Pressing together with buttons address   | Start-up  | Request automatic assignment   |
|----------|----------|--|--|---|--|
| HACCP    | HACCP    | enters the menu to display and delete the HACCP alarms   |  |   |  |
| ON/OFF   | ON/OFF   | if pressed for more than 5 s, switches the unit on/off   |  |   |  |
| PRG/MUTE | PRG/MUTE | if pressed for more than 5 s, accesses the menu for setting type "F" (frequent) parameters in the event of alarm: silences the audible alarm (buzzer) and disables the alarm relay | SET: if pressed for more than 5 s together with the SET button accesses the menu for setting the type "C" (configuration) or downloading the parameters<br>UP/CC: if pressed for more than 5 s together with the UP/CC button, resets any active alarms with manual reset  | if pressed for more than 5 s at start-up, enables the automatic serial address assignment procedure | if pressed for more than 1 s, enters the automatic serial address assignment procedure |
| UP/CC    | UP/CC    | if pressed for more than 5 s, enables/disables continuous cycle operation  | SET: if pressed for more than 5 s together with the SET button, starts the procedure for printing the reports (function available, with management to be implemented)<br>PRG/MUTE: if pressed for more than 5 s together with the PRG/MUTE button, resets any active alarms with manual reset  |   |  |
| LUCE     | LUCE     | if pressed for more than 1 s, enables/disables auxiliary AUX2  |  |   |  |
| AUX      | AUX      | if pressed for more than 1 s, enables/disables auxiliary AUX1  |  |   |  |
| DOWN/DEF | DOWN/DEF | if pressed for more than 5 s, enables/disables a manual defrost  |  |   |  |
| SET      | SET      | if pressed for more than 1 s, displays and/or sets the set point   | PRG/MUTE: if pressed for more than 5 s together with the PRG/MUTE button accesses the menu for setting the type "C" (configuration) or downloading the parameters<br>UP/CC: if pressed for more than 5 s together with the UP/CC button, starts the procedure for printing the reports (function available, with management to be implemented) |   |  |

Tab. 3

**Setting the set point (desired temperature value)**

To display or set the set point, proceed as follows:

- press the "set" button for more than 1 second to display the set point;
- increase or decrease the value of the set point, using the  $\uparrow$  and  $\downarrow$  buttons respectively, until reaching the desired value;
- press the "set" button again to confirm the new value.

**Alarms with manual reset**

The alarms with manual reset can be reset by pressing the  $\uparrow$  and  $\downarrow$  buttons together for more than 5 s.

**Manual defrost**

As well as the automatic defrost function, a manual defrost can be enabled, if the temperature conditions allow, by pressing  $\downarrow$  for 5 seconds.

**ON/OFF button**

Pressing this button for 5 s switches the unit on/off. When the controller is turned off, it actually goes into standby, and therefore, when carrying out maintenance on the device, it must be disconnected from the power supply.

**HACCP function**

powercompact is compliant with the HACCP standards in force since it allows the monitoring of the temperature of the stored food. "HA" alarm = exceeded maximum threshold: up to three HA events are saved (HA, HA1, HA2) respectively from the more recent (HA) to the oldest (HA2) and a HAn signal that displays the number of occurred HA events. "HF" alarm = power failure lasting over a minute and exceeded AH maximum threshold: up to three HF events are saved (HF, HF1, HF2) respectively from the more recent (HF) to the oldest (HF2) and a HFn signal that displays the number of occurred HF events. HA/HF alarm setting: AH parameter (high temperature threshold); Ad and Htd (Ad+Htd = HACCP alarm activation delay). Display of the details: access to HA or HF parameters pressing the "HACCP" button and use  $\uparrow$  or  $\downarrow$  buttons to glance over. HACCP alarm erasing: press the "HACCP" button for more than 5 s, the message 'res' indicates that the alarm has been deleted. To cancel the saved alarms press the "HACCP" and  $\downarrow$  buttons for more than 5 s.

**Continuous cycle**

Pressing the button  $\downarrow$  for more than 5 seconds enables the continuous cycle function. During operation in continuous cycle, the compressor continues to operate for the time 'cc' and it stops when reaches the 'cc' time out or the minimum temperature envisaged (AL = minimum temperature alarm threshold). Continuous cycle setting: 'cc' parameter (continuous cycle duration): 'cc' = 0 never active; 'cb' parameter (bypassing the alarm after the continuous cycle): it avoids or delays the low temperature alarm after the continuous cycle.

**Procedure for setting the default parameter values**

To set the default parameter values on the controller, proceed as follows:

- If "Hdn" = 0: 1: switch the instrument off; 2: switch the instrument back on, holding the  $\uparrow$  button until the message "Std" is shown on the display.

Note: the default values are only set for the visible parameters (C and F). For further details see table "Summary of operating parameters".

- If "Hdn" > 0: 1: switch the instrument off; 2: switch the instrument back on, holding the  $\uparrow$  button until the value 0 is shown on the display; 3: select the set of default parameters, between 0 and "Hdn", using the  $\uparrow$  and  $\downarrow$  buttons;

- press the  $\uparrow$  button until the message "Std" is shown on the display

**Automatic assignment of the serial address**

This is a special procedure that, using an application installed on a PC, allows setting and managing simply the addresses of all instruments (featuring this function) connected to the CAREL network. The procedure is very simple:

- Using the remote application. The "Network definition" procedure started; the application sends a special message (<IADR>) across the CAREL network, containing the network address.
- Pressing the  $\uparrow$  on an instrument connected to the network recognises the message sent by the remote application, automatically sets the address to the desired value and sends a confirmation message to the application, containing the unit code and firmware revision (message 'V'). When the message sent by the remote application is recognised, the instrument shows the message 'Add' on the display for 5 seconds, followed by the value of the serial address assigned;
- The application, on receiving the confirmation message from the units connected to the network, saves the information received in its database, increases the serial address and sends the message '<IADR>' again;
- At this point, the procedure starting from point 2 can be repeated on another unit connected to the network, until defining all the network addresses.

Note: once the address has been assigned to an instrument, the operation, for safety reasons, is disabled on the same instrument for 1 minute, preventing a different address from being assigned to the instrument.

**Accessing the configuration parameters (type C)**

- Press the  $\uparrow$  and  $\downarrow$  buttons at the same time for more than 5 seconds; the display will show the number "00" (password prompt).
- Press the  $\uparrow$  or  $\downarrow$  button until displaying the number "22" (parameter access password)
- Confirm by pressing the "set" button.
- The display shows the code of the first modifiable "C" parameter.

**Accessing the configuration parameters (type F)**

- Hold the  $\uparrow$  button for more than 5 s (if there are active alarms, first mute the buzzer), the display will show the first modifiable "F" parameter.

**Modifying the parameters**

After having displayed the parameter, either type "C" or type "F", proceed as follows:

- Press the  $\uparrow$  or  $\downarrow$  button to scroll the parameters, until reaching the parameter to be modified; when scrolling, an icon appears on the display representing the category the parameter belongs to.
- Alternatively, press the  $\uparrow$  button to display a menu that is used to quickly access the category of parameters to be modified.
- Scroll the menu with the  $\uparrow$  and  $\downarrow$  buttons; the display shows the codes of the various categories of parameters (see the Summary of operating parameters), accompanied by the display of the corresponding icon (if present).
- Once having reached the desired category, press "set" to go directly to the first parameter in the chosen category (if no parameter is visible, pressing the "set" button will have no effect).
- At this stage, modify the parameters or return to the "Categories" menu, using the  $\uparrow$  button.
- Press "set" to display the value associated with the parameter.
- Increase or decrease the value using the  $\uparrow$  or  $\downarrow$  buttons respectively.
- Press "set" to temporarily save the new value and return to the display of the parameter.
- Repeat the operations from point 1 or point 2.
- If the parameter has sub-parameters, press "set" to display the first sub-parameter.
- Press the  $\uparrow$  or  $\downarrow$  button to display all the sub-parameters.
- Press "set" to display the associated value.
- Increase or decrease the value using the  $\uparrow$  or  $\downarrow$  button respectively.
- Press "set" to temporarily save the new value and return to the display of the sub-parameter code.
- Press  $\uparrow$  to return to the display of the parent parameter.

**Saving the new values assigned to the parameters**

To definitively save the new values of the modified parameters, press the  $\uparrow$  button for more than 5 seconds, thus exiting the parameter setting procedure.

All the modifications made to the parameters, temporarily saved in the RAM, can be cancelled and "normal operation" resumed by not pressing any button for 60 seconds, thus allowing the parameter setting session to expire due to timeout. If the instrument is switched off before pressing the  $\uparrow$  button, all the modifications made to the parameters and temporarily saved will be lost.

**Directly accessing the parameters by selecting the category**

The configuration parameters can also be accessed, in addition to the mode described above, via the category (see the icons and abbreviations in the table below), according to the list on the display with the corresponding name and icon. To directly access the list of parameters grouped by category, press the  $\uparrow$  button for at least 1 second,  $\uparrow$ , and to modify the parameter press "set",  $\uparrow$ .

| Category                 | Parameters | Message             | Icon         |
|--------------------------|------------|---------------------|--------------|
| Probe parameters         | /          | 'Pro'               | $\uparrow$   |
| Control parameters       | r          | 'CtL'               | $\downarrow$ |
| Compressor parameters    | c          | 'CMP'               | $\uparrow$   |
| Defrost parameters       | d          | 'dEF'               | $\downarrow$ |
| Alarm parameters         | A          | 'ALM'               | $\uparrow$   |
| Fan parameters           | F          | 'FAn'               | $\downarrow$ |
| Configuration parameters | H          | configuration 'CnF' | AUX          |
| HACCP parameters         | H-HACCP    | 'HcP'               | HACCP        |
| RTC parameters           | rtc        | 'rtc'               | $\downarrow$ |

Tab. 4

**Probe configuration (/A2.../A5)**

In the powercompact series, these parameters are used to configure the operating mode of the probes:

- 0 = probe absent; 1 = product probe (used for display only); 2 = defrost probe; 3 = condenser probe; 4 = antifreeze probe.

**Configuration of the digital inputs (A4, A5, A9)**

In the powercompact series, this parameter and the model of controller used define the meaning of the digital input:

- 0 = input not active;
- 1 = immediate external alarm, normally closed: open = alarm;
- 2 = delayed external alarm, normally closed;
- 3 = enable defrost from external contact: open = disabled (an external contact can be connected to the multifunction input to enable or disable the defrost);
- 4 = start defrost from external contact;
- 5 = door switch with stopping of compressor and fans: open = open door;
- 6 = remote ON/OFF: CLOSED=ON;
- 7 = curtain switch: close = lowered curtain;
- 8 = low pressure switch input for pump-down: open = low pressure;
- 9 = door switch with stopping of fans only: open = open door;
- 10 = direct/reverse cycle operation: open = direct;
- 11 = light sensor;
- 12 = AUX output enabling (if configured with H1 o H5 parameters): opening = enabling;
- 13 = door switch with compress. and fans OFF, with light not managed;
- 14 = door switch with fans OFF and light not managed.

**Configuration of the relay outputs AUX1 (H1) and AUX2 (H5)**


Establishes whether relays AUX1 and AUX2 (present only if envisaged by the model) are used as auxiliary outputs (e.g. demister fan or other ON/OFF actuator), an alarm output, a light output, a defrost actuator for the auxiliary evaporator, pump-down valve control or output for the condenser fan.

- 0 = alarm output: normally energised; the relay is de-energised when an alarm occurs;
- 1 = alarm output: normally de-energised; the relay is energised when an alarm occurs;
- 2 = auxiliary output;
- 3 = light output;
- 4 = auxiliary evaporator defrost output;
- 5 = pump-down valve output;
- 6 = condenser fan output;
- 7 = delayed compressor output;
- 8 = auxiliary output with OFF shutdown;
- 9 = light output with OFF shutdown;
- 10 = disabled output;
- 11 = reverse output in dead zone control;
- 12 = second compressor step output;
- 13 = second compressor step output with rotation.

**Warning:** the mode H1/H5=0 is useful for signalling the alarm status even in case of power failure.

Note: in the models fitted with only one auxiliary output, to associate the button  $\uparrow$  to this output, set H1 = 10 and H5 = 3. It is necessary to associate the relay assigned to aux 1 to the auxiliary output 2. The operation can be performed using the programming kit PSOPZPRG00 and the programming key PSOPZKEY00/A0.

Optional connections:

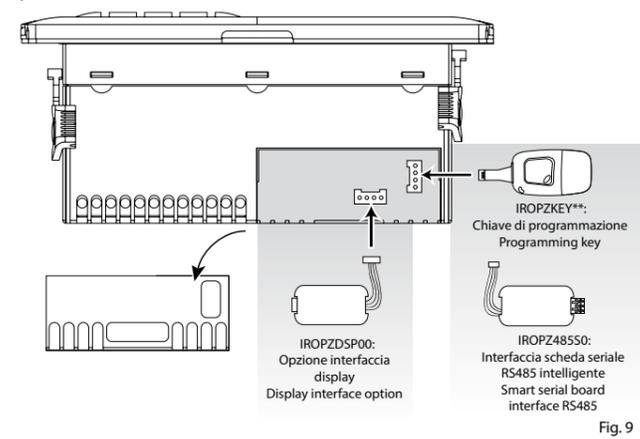

Date and day for defrost event (parameters td1...td8)

0= no event; 1..7= Monday..Sunday; 8= from Monday to Friday; 9= from Monday to Saturday; 10= from Saturday to Sunday; 1= every day.

Summary of operating parameters

UOM = Unit of measure; Def. = Default value.

| Symbol | Code | Parameter   | Models | UOM   | Type | Min | Max | Def. |
|--------|------|---|--------|-------|------|-----|-----|------|
| Pw     |      | Password  | MSYF   | -     | C    | 0   | 200 | 22   |
| Z2     |      | Measurement stability   | MSYF   | -     | C    | 1   | 15  | 4    |
| /3     |      | Probe display response  | MSYF   | -     | C    | 0   | 15  | 0    |
| /4     |      | Virtual probe   | MSYF   | -     | C    | 0   | 100 | 0    |
| /5     |      | Select °C or °F   | MSYF   | flag  | C    | 0   | 1   | 0    |
| /6     |      | Display decimal point   | MSYF   | flag  | C    | 0   | 1   | 0    |
| /7     |      | 0: with tenths of a degree<br>1: without tenths of a degree   | MSYF   | -     | C    | 0   | 1   | 0    |
| /t1    |      | Display decimal point   | MSYF   | -     | C    | 1   | 7   | 1    |
| /t2    |      | 1: virtual probe<br>2: probe 1<br>3: probe 2<br>4: probe 3<br>5: probe 4<br>6: probe 5<br>7: set point  | MSYF   | -     | C    | 0   | 6   | 0    |
| /tE    |      | Display on external terminal  | MSYF   | -     | C    | 0   | 6   | 0    |
| /tF    |      | 0: remote terminal not present<br>1: virtual probe<br>2: probe 1<br>3: probe 2<br>4: probe 3<br>5: probe 4  | MSYF   | -     | C    | 0   | 2   | 0    |
| /P     |      | Select type of probe  | MSYF   | -     | C    | 0   | 2   | 0    |
| /A2    |      | 0: NTC standard with range -50T90 °C<br>1: NTC enhanced with range -40T150 °C<br>2: PTC standard with range -50T150 °C  | MSYF   | -     | C    | 0   | 2   | 0    |
| /A3    |      | Configuration of probe 2 (S2)   | MSYF   | -     | C    | 0   | 4   | 2    |
| /A4    |      | Configuration of probe 4 (S4, D12) As for /A2   | MSYF   | -     | C    | 0   | 3   | 0    |
| /A5    |      | Configuration of probe 5 (S5, D13) As for /A2   | MSYF   | -     | C    | 0   | 3   | 0    |
| /c1    |      | Calibration of probe 1  | MSYF   | °C/°F | C    | -20 | 20  | 0.0  |
| /c2    |      | Calibration of probe 2  | MSYF   | °C/°F | C    | -20 | 20  | 0.0  |
| /c3    |      | Calibration of probe 3  | MSYF   | °C/°F | C    | -20 | 20  | 0.0  |
| /c4    |      | Calibration of probe 4  | MSYF   | °C/°F | C    | -20 | 20  | 0.0  |
| /St    |      | Temperature set point   | MSYF   | °C/°F | F    | 0.1 | 20  | 2.0  |
| /rd    |      | Control delta   | SYF    | °C/°F | F    | 0.0 | 60  | 4.0  |
| /rr    |      | Reverse differential for control with dead band   | SYF    | °C/°F | C    | 0.1 | 20  | 2.0  |
| /r1    |      | Minimum set point allowed   | MSYF   | °C/°F | C    | -50 | r2  | -50  |
| /r2    |      | Maximum set point allowed   | MSYF   | °C/°F | C    | r1  | 200 | 6.0  |
| /r3    |      | Operating mode  | SYF    | flag  | C    | 0   | 2   | 0    |
| /r4    |      | 0: Direct (cooling) with defrost control<br>1: Direct (cooling)<br>2: Reverse-cycle (heating)   | MSYF   | °C/°F | C    | -20 | 20  | 3.0  |
| /r5    |      | Automatic night-time set point variation  | MSYF   | flag  | C    | 0   | 1   | 0    |
| /r6    |      | Enable temperature monitoring   | MSYF   | flag  | C    | 0   | 1   | 0    |
| /r7    |      | 0: Disabled<br>1: Enabled   | MSYF   | ore   | F    | 0   | 999 | -    |
| /r8    |      | Temperature monitoring interval   | MSYF   | °C/°F | F    | -   | -   | -    |
| /r9    |      | Maximum temperature read  | MSYF   | °C/°F | F    | -   | -   | -    |
| /r10   |      | Minimum temperature read  | MSYF   | °C/°F | F    | -   | -   | -    |
| /c0    |      | Comp. fan and AUX delay on start-up in  | SYF    | min   | C    | 0   | 15  | 0    |
| /c1    |      | Minimum time between successive starts  | SYF    | min   | C    | 0   | 15  | 0    |
| /c2    |      | Minimum compressor OFF time   | SYF    | min   | C    | 0   | 15  | 0    |
| /c3    |      | Minimum compressor ON time  | SYF    | min   | C    | 0   | 15  | 0    |
| /c4    |      | Duty setting  | SYF    | min   | C    | 0   | 100 | 0    |
| /c5    |      | Continuous cycle duration   | SYF    | ore   | C    | 0   | 15  | 0    |
| /c6    |      | Alarm bypass after continuous cycle   | SYF    | ore   | C    | 0   | 250 | 2    |
| /c7    |      | Maximum pump down time  | SYF    | s     | C    | 0   | 900 | 0    |
| /c8    |      | Comp. start delay after open PD valve (factory default=0, not visible from display)   | SYF    | s     | C    | 0   | 60  | 5    |
| /c9    |      | Enable autostart function in PD   | SYF    | flag  | C    | 0   | 1   | 0    |
| /c10   |      | Select Pump down by time or pressure  | SYF    | flag  | C    | 0   | 1   | 0    |
| /c11   |      | 0: Pump down by pressure<br>1: Pump down by time  | SYF    | flag  | C    | 0   | 1   | 0    |
| /d0    |      | Second compressor delay   | SYF    | s     | C    | 0   | 250 | 4    |
| /d1    |      | Type of defrost SYF   | SYF    | flag  | C    | 0   | 4   | 0    |
| /d2    |      | 0: Electric heater defrost by temperature<br>1: Hot gas defrost by temperature<br>2: Electric heater defrost by time<br>3: Hot gas defrost by time<br>4: Electric heater defrost thermostat by time   | SYF    | ore   | F    | 0   | 250 | 8    |
| /d3    |      | Interval between defrosts   | SYF    | ore   | F    | 0   | 250 | 8    |
| /d4    |      | End defrost temperature, evaporator   | SYF    | °C/°F | F    | -50 | 200 | 4.0  |
| /d5    |      | End defrost temperature, aux evap.  | SYF    | °C/°F | F    | -50 | 200 | 4.0  |
| /d6    |      | Maximum defrost duration, evaporator  | SYF    | min   | F    | 1   | 250 | 30   |
| /d7    |      | Maximum defrost duration, aux evap  | SYF    | min   | F    | 1   | 250 | 30   |
| /d8    |      | Defrost start delay   | SYF    | min   | C    | 0   | 250 | 0    |
| /d9    |      | Enable defrost on start-up  | SYF    | flag  | C    | 0   | 1   | 0    |
| /d10   |      | 0: No defrost is performed when the instrument is switched on<br>1: A defrost is performed when the instrument is switched on   | SYF    | flag  | C    | 0   | 1   | 0    |
| /d11   |      | Defrost delay on start-up   | SYF    | min   | C    | 0   | 250 | 0    |
| /d12   |      | Display on hold during defrost  | SYF    | -     | C    | 0   | 2   | 1    |
| /d13   |      | 0: Alternating display of dEF and probe value<br>1: Display of the last temp. shown<br>2: Display of dEF steady   | SYF    | -     | C    | 0   | 2   | 1    |
| /d14   |      | Dripping time after defrost   | SYF    | min   | F    | 0   | 15  | 2    |
| /d15   |      | Alarm bypass after defrost  | SYF    | ore   | F    | 0   | 250 | 1    |
| /d16   |      | Alarm bypass after door open  | SYF    | min   | C    | 0   | 250 | 0    |
| /d17   |      | Defrost priority over compressor protectors   | SYF    | flag  | C    | 0   | 1   | 0    |
| /d18   |      | 0: The protection times c1, c2 and c3 are observed<br>1: The protection times c1, c2 and c3 are not observed  | SYF    | flag  | C    | 0   | 1   | 0    |
| /d19   |      | Display of defrost probe 1  | MSYF   | °C/°F | F    | -   | -   | -    |
| /d20   |      | Display of defrost probe 2  | MSYF   | °C/°F | F    | -   | -   | -    |
| /d21   |      | Time base for defrost   | SYF    | flag  | C    | 0   | 1   | 0    |
| /d22   |      | 0: dl in hours, dP1 and dP2 in minutes<br>1: dl in minutes, dP1 and dP2 in seconds  | SYF    | flag  | C    | 0   | 1   | 0    |
| /d23   |      | Compressor running time   | SYF    | ore   | C    | 0   | 250 | 0    |
| /d24   |      | Running time temperature threshold  | SYF    | °C/°F | C    | -20 | 20  | 1.0  |
| /d25   |      | Advanced defrost  | SYF    | -     | C    | 0   | 3   | 0    |
| /d26   |      | Nominal defrost duration  | SYF    | -     | C    | 1   | 100 | 65   |
| /d27   |      | Proportional factor, variation in dl  | SYF    | -     | C    | 0   | 100 | 50   |
| /d28   |      | Alarm and fan differential  | MSYF   | °C/°F | C    | 0.1 | 20  | 2.0  |
| /d29   |      | Type of threshold 'AL' and 'AH'   | MSYF   | flag  | C    | 0   | 1   | 0    |
| /d30   |      | 0: AL and AH are relative thresholds to the set point<br>1: AL and AH are absolute thresholds   | MSYF   | flag  | C    | 0   | 1   | 0    |
| /d31   |      | Low temperature alarm threshold   | MSYF   | °C/°F | F    | -50 | 200 | 0.0  |
| /d32   |      | High temperature alarm threshold  | MSYF   | °C/°F | F    | -50 | 200 | 0.0  |
| /d33   |      | Low and high temperature signal delay   | MSYF   | min   | F    | 0   | 250 | 120  |
| /d34   |      | Digital input 1 configuration   | SYF    | -     | C    | 0   | 14  | 0    |
| /d35   |      | 0: Input not active<br>1: Immediate external alarm<br>2: Delayed external alarm<br>3: Enable defrost (model M probe selection)<br>4: Start defrost<br>5: Door switch with compressor and fan stop<br>6: Remote on/off<br>7: Curtain switch<br>8: Low pressure switch<br>9: Door switch with fan stop only<br>10: Direct/reverse<br>11: Light sensor<br>12: Activation of the AUX output<br>13: Door switch with compressor and fans off and light not managed<br>14: Door switch with fans only off and light not managed | SYF    | -     | C    | 0   | 14  | 3    |
| /d36   |      | Digital input 2 configuration (DI2) - As for A4   | MSYF   | -     | C    | 0   | 14  | 0    |
| /d37   |      | Light management mode with door switch  | MSYF   | flag  | C    | 0   | 1   | 0    |
| /d38   |      | High condenser temperature alarm  | SYF    | °C/°F | C    | 0.0 | 200 | 70.0 |
| /d39   |      | High condenser temperature alarm differential   | SYF    | °C/°F | C    | 0.1 | 20  | 10   |
| /d40   |      | High condenser temperature alarm delay  | SYF    | min   | C    | 0   | 250 | 0    |
| /d41   |      | Light sensor OFF time   | SYF    | s     | C    | 0   | 250 | 0    |
| /d42   |      | Antifreeze alarm threshold  | MSYF   | °C/°F | C    | -50 | 200 | -5.0 |
| /d43   |      | Antifreeze alarm delay  | MSYF   | min   | C    | 0   | 15  | 1    |
| /d44   |      | Fan management  | F      | flag  | C    | 0   | 2   | 0    |
| /d45   |      | 0: Fans always on<br>1: Fans controlled according to the temperature difference between the virtual control probe and the evaporator temperature<br>2: Fans controlled according to the evaporator temperature  | F      | flag  | C    | 0   | 2   | 0    |
| /d46   |      | Fan start temperature   | F      | °C/°F | F    | -50 | 200 | 5.0  |
| /d47   |      | Fan Off with compressor OFF   | F      | flag  | C    | 0   | 1   | 1    |
| /d48   |      | 0: Fans always on<br>1: Fans off with compressor off  | F      | flag  | C    | 0   | 1   | 1    |
| /d49   |      | Fans in defrost   | F      | flag  | C    | 0   | 1   | 1    |
| /d50   |      | 0: Fans operate during defrosts<br>1: Fans do not operate during defrosts   | F      | flag  | C    | 0   | 1   | 1    |
| /d51   |      | Fan OFF after dripping  | F      | min   | F    | 0   | 15  | 1    |
| /d52   |      | Condenser fan stop temperature  | MSYF   | °C/°F | C    | -50 | 200 | 40   |
| /d53   |      | Condenser fan start differential  | MSYF   | °C/°F | C    | 0.1 | 20  | 5.0  |

Technical specification

| Model  | Voltage   | Power  |
|--|---|--|
| E  | 230 V~ (+10%, -15%), 50/60 Hz<br>230 V~ (+10%, -10%), 50/60 Hz (vers. 16 A, 8A, 8A)   | 3 VA, 25 mA~ max.  |
| A  | 115 V~ (+10%, -15%), 50/60 Hz<br>115 V~ (+10%, -10%), 50/60 Hz (vers. 16 A, 8A, 8A)   | 3 VA, 50 mA~ max.  |
| H  | 115 to 230 V~ (switching) (+10%/-15%), 50/60 Hz   | 6 VA, 50 mA~ max.  |
| 0  | 12 V~ (+10%, -15%), 50/60 Hz<br>12 Vdc, 1.2 to 18 Vdc   | To use only the transformer TRAI 2VDE00 with 315 mA slow-blow fuse in the secondary        |
| E, A, H  | insulation in reference to very low voltage parts   | reinforced 6 mm in air, 8 mm on surface 3750 V insulation                                  |
| 0  | insulation in reference to very low voltage parts   | externally guaranteed by safety transformer  |
|  | insulation from relay outputs   | primary 3 mm in air, 4 mm on surface 1250 V insulation                                     |
| S1   | NTC or PTC, depending on the model  |  |
| S2   | NTC or PTC, depending on the model  |  |
| D11/S3   | free contact, contact resistance < 10 Ω, closing current 6 mA<br>NTC or PTC, depending on the model                           |  |
| D12 / S4   | free contact, contact resistance < 10 Ω, closing current 6 mA<br>NTC or PTC, depending on the model                           |  |
| Maximum distance of probes and digital inputs less than 10 m<br>Note: During installation keep the power and load connections separate probe cables, digital inputs, repeater display and supervisory system.  |   |  |
| NTC high temperature   | 50 kΩ at 25 °C, range from -40T150 °C   | measurement error: 1.5 °C in the -40T150 °C range 4 °C in the external range at -20T115 °C |
| Std. CAREL NTC   | 10 kΩ at 25 °C, range from -50T90 °C  | measurement error: 1 °C in the -50T90 °C range 3 °C in the -50T90 °C range                 |
| Std. CAREL PTC (specific model)  | 985 Ω at 25 °C, range from -50T150 °C   | measurement error: 2 °C in the -50T150 °C range 4 °C in the -50T150 °C range               |
| depending on the model   |   |  |
| EN60730-1  |   |  |
| UL 873   |   |  |
| 250 V~   |   |  |
| operating cycles   |   |  |
| 5 A *  | 5 (1) A<br>100000   | 5 A resistive 1 FLA 6 LRA C 300<br>30000   |
| 8 A *  | 8 (4) A on N.O. 6 (4) A on N.C. 2 (2) A if the N.C. and N.O. contacts are connected contemporaneously<br>100000               | 8 A resistive 2 FLA 12 LRA C300<br>30000<br>Uscite relè                                    |
| 16 A *   | 12 (4) A up to 60 °C on N.O. 12 (2) A on N.O. and N.C.<br>100000  | 12 A resistive 5FLA 30 LRA C300<br>30000   |
| 2 Hp   | 10 (10) A<br>100000   | 12 A resistive 12 FLA 72 LRA<br>30000  |
| insulation from very low voltage parts   |   |  |
| reinforced 6 mm in air, 8 mm on surface 3750 V insulation  |   |  |
| insulation between the relay outputs   |   |  |
| primary 3 mm in air, 4 mm on surface 1250 V insulation   |   |  |
| * relay not suitable for fluorescent loads (neon lights, ...) that use starters (ballasts) with phase-shift capacitors. Fluorescent lamps with electronic control devices or without phase-shift capacitors can be used, within the operating limits specified for each type of relay. |   |  |
| Type of connection   | Cross-section   | Maximum current  |
| fixed screw-on removable for screw blocks fasten with crimped contacts   | for wires from 0.5 to 2.5 mm²   | 12 A   |
| The installer has to provide the correct dimensioning of the power supply and cable connection between the instrument and the loads. In max load and max operating temp. conditions, cables rated for operation at up to 105 °C are required.  |   |  |
| plastic  | dimensions 36x167x75 mm<br>mount-in depth 64 mm   |  |
| panel drilling template  | using screws from front panel dimensions 29x138.5 mm distance between fastening screws 153.5 mm                               |  |
| fastening screws   | countersunk with tread diameter 3.9 mm maximum  |  |
| plastic  | dimensions 39.4x183x75 mm<br>mounting depth 63 mm   |  |
| on smooth, hard and indeformable panel   | using screws from the front or brackets   |  |
| drilling template  | dimensions from 138.5x29 to 150x31 spacing between fastening screws 165 mm or 153.5 mm  |  |
| fastening screws   | countersunk with maximum thread diameter 3.9 mm for 165 mm spacing; for 153 spacing, flat head with max. thread diameter 3 mm |  |
| digits   | 3 digit LED   |  |
| display range  | from -99 to 999   |  |
| operating status   | indicated by graphic icons on the display   |  |
| 8 rubber silicon buttons   |   |  |
| available depending on the model   |   |  |
| available depending on the model   |   |  |
| available on all models  |   |  |
| error at 25 °C   | ±10 ppm (±5.3 min/year)   |  |
| error in the temperature range -10T60 °C   | -50 ppm (-27 min/year)  |  |
| ageing   | < ±5 ppm (±2.7 min/year)  |  |
| discharge time   | 6 months (max. 8 months)  |  |
| recharge time  | typical 5 hours (<8 hours max.)   |  |
| Operating temperature  | -10T60 °C   |  |
| Operating humidity   | <90% r.H. non-condensing  |  |
| Storage temperature  | -20T70 °C   |  |
| Storage humidity   | <90% r.H. non-condensing  |  |
| Front panel index of protection  | smooth and stiff panel installation with gasket IP65  |  |
| Environmental pollution  | 2 (normal)  |  |
| PTI of the insulating material   | printed circuit board 250, insulation 175   |  |
| Period of electric stress across insulating parts  | long  |  |
| Category of resistance to fire   | category D and category B (UL 94-V0)  |  |
| Class of protection against voltage surges   | category II   |  |
| Type of disconnection or interruption  | 1.B relay contacts (micro-disconnection)  |  |
| Construction of control  | incorporated control, electronically  |  |
| Classification according to protection against electric shock  | Class II, by appropriate incorporation  |  |
| The control is either to be hand-held or is intended for a hand-held equipment   | no  |  |
| Software class and structure   | class A   |  |
| Front panel cleaning   | only use neutral detergents and water   |  |
| Serial interface for CAREL network   | external, available on all models   |  |
| Interface for repeater display   | external, available on models with H and 0 power supply   |  |
| Max. distance between interface and display  | 10 mt   |  |
| Programming key  | available for all models  |  |

The powercompact range fitted with the standard CAREL NTC probe is compliant with standard EN 13485 on thermometers for measuring the air temperature in applications on units for the conservation and sale of refrigerated, frozen and deep-frozen food and ice cream. Designation of the instrument: EN13485, air, S, A, 1, -50T90 °C. The standard CAREL NTC probe is identifiable by the printed laser code on "WP" models, or the code "103AT-11" on "HP" models, both visible on the sensor part.

| Code     | Icon on the display | Alarm relay | Buzzer | Reset     | Description                 |
|----------|---------------------|-------------|--------|-----------|-----------------------------|
| 'E'      | flashing            | active      | active | automatic | virtual control probe fault |
| 'E0'     | flashing            | OFF         | OFF    | automatic | room probe S1 fault         |
| 'E1'     | flashing            | OFF         | OFF    | automatic | defrost probe S2 fault      |
| 'E2'-3-4 | flashing            | OFF         | OFF    | automatic | probes S3-4-5 fault         |
| '        |                     |             |        |           |                             |